

# ARROW HEAD Extractor

The ARROWHEAD Extractor EASILY REMOVES ARROWHEADS. Once an ARROWHEAD BECOMES EMBEDDED INTO A FOREIGN SUBSTANCE, SUCH AS A TREE, SIMPLY ATTACH THE EXTRACTOR PLATE TO THE ARROWHEAD, THEN THREAD THE REMOVING SCREWS INTO THE EXTRACTOR PLATE AND BEGIN TIGHTENING DOWN AGAINST THE FOREIGN OBJECT UNTILL ARROWHEAD IS EXTRACTED.